

PART NUMBER	DESCRIPTION	MANUFACTURER
098C00210	VALVE ASSEMBLY-SEQUENCE, UPLOCK	SHIMADZU
098C-00210	VALVE ASSEMBLY-SEQUENCE, UPLOCK	SHIMADZU
107484-6	REGULATOR	HONEYWELL
107492-1	REGULATOR	HONEYWELL
107492-2	REGULATOR	HONEYWELL
107492-3	REGULATOR	HONEYWELL
107492-5	REGULATOR	HONEYWELL
123266-2-1	VALVE, CHECK	HONEYWELL
123268-1-1	VALVE, CHECK	HONEYWELL
123544-1-1	VALVE, SHUT-OFF	HONEYWELL
123544-2-1	VALVE, SHUT-OFF	HONEYWELL
123558-1-1	VALVE, CHECK	HONEYWELL
123558-1-3	VALVE, CHECK	HONEYWELL
123558-1-4	VALVE, CHECK	HONEYWELL
141A6105-12	SNUBBER ASSY	BOEING
141A6105-6	SNUBBER ASSY	BOEING
141A6105-7	SNUBBER ASSY	BOEING
158300-101	ACTUATOR	MOOG INC
160550-1	TEMPERATURE CONTOL VALVE	HONEYWELL
161A1100-10	MAIN LANDING GEAR	BOEING
161A1100-100	MAIN LANDING GEAR	BOEING
161A1100-101	MAIN LANDING GEAR	BOEING
161A1100-102	MAIN LANDING GEAR	BOEING
161A1100-13	MAIN LANDING GEAR	BOEING
161A1100-14	MAIN LANDING GEAR	BOEING
161A1100-15	MAIN LANDING GEAR	BOEING
161A1100-16	MAIN LANDING GEAR	BOEING
161A1100-19	MAIN LANDING GEAR	BOEING
161A1100-20	MAIN LANDING GEAR	BOEING
161A1100-23	MAIN LANDING GEAR	BOEING
161A1100-24	MAIN LANDING GEAR	BOEING
161A1100-27	MAIN LANDING GEAR	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A1100-28	MAIN LANDING GEAR	BOEING
161A1100-31	MAIN LANDING GEAR	BOEING
161A1100-32	MAIN LANDING GEAR	BOEING
161A1100-35	MAIN LANDING GEAR	BOEING
161A1100-36	MAIN LANDING GEAR	BOEING
161A1100-39	MAIN LANDING GEAR	BOEING
161A1100-40	MAIN LANDING GEAR	BOEING
161A1100-41	MAIN LANDING GEAR	BOEING
161A1100-42	MAIN LANDING GEAR	BOEING
161A1100-45	MAIN LANDING GEAR	BOEING
161A1100-46	MAIN LANDING GEAR	BOEING
161A1100-49	MAIN LANDING GEAR	BOEING
161A1100-5	MAIN LANDING GEAR	BOEING
161A1100-50	MAIN LANDING GEAR	BOEING
161A1100-53	MAIN LANDING GEAR	BOEING
161A1100-54	MAIN LANDING GEAR	BOEING
161A1100-6	MAIN LANDING GEAR	BOEING
161A1100-63	MAIN LANDING GEAR	BOEING
161A1100-64	MAIN LANDING GEAR	BOEING
161A1100-67	MAIN LANDING GEAR	BOEING
161A1100-68	MAIN LANDING GEAR	BOEING
161A1100-71	MAIN LANDING GEAR	BOEING
161A1100-72	MAIN LANDING GEAR	BOEING
161A1100-75	MAIN LANDING GEAR	BOEING
161A1100-76	MAIN LANDING GEAR	BOEING
161A1100-83	MAIN LANDING GEAR	BOEING
161A1100-84	MAIN LANDING GEAR	BOEING
161A1100-87	MAIN LANDING GEAR	BOEING
161A1100-88	MAIN LANDING GEAR	BOEING
161A1100-9	MAIN LANDING GEAR	BOEING
161A1100-91	MAIN LANDING GEAR	BOEING
161A1100-92	MAIN LANDING GEAR	BOEING
161A1100-99	MAIN LANDING GEAR	BOEING
161A1110	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-1	OUTER CYLINDER ASSEMBLY	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A1110-10	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-11	OUTER CYLINDER	BOEING
161A1110-12	OUTER CYLINDER	BOEING
161A1110-13	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-14	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-15	OUTER CYLINDER	BOEING
161A1110-16	OUTER CYLINDER	BOEING
161A1110-17	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-18	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-2	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-3	OUTER CYLINDER	BOEING
161A1110-4	OUTER CYLINDER	BOEING
161A1110-5	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-6	OUTER CYLINDER ASSEMBLY	BOEING
161A1110-7	OUTER CYLINDER	BOEING
161A1110-8	OUTER CYLINDER	BOEING
161A1110-9	OUTER CYLINDER ASSEMBLY	BOEING
161A1116	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-1	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-10	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-11	OUTER CYLINDER	BOEING
161A1116-12	OUTER CYLINDER	BOEING
161A1116-13	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-14	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-15	OUTER CYLINDER	BOEING
161A1116-16	OUTER CYLINDER	BOEING
161A1116-17	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-18	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-2	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-3	OUTER CYLINDER	BOEING
161A1116-4	OUTER CYLINDER	BOEING
161A1116-5	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-6	OUTER CYLINDER ASSEMBLY	BOEING
161A1116-7	OUTER CYLINDER	BOEING
161A1116-8	OUTER CYLINDER	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
--------------------	--------------------	---------------------

161A1116-9	OUTER CYLINDER ASSEMBLY	BOEING
161A1118	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-1	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-10	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-11	OUTER CYLINDER	BOEING
161A1118-12	OUTER CYLINDER	BOEING
161A1118-13	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-14	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-15	OUTER CYLINDER	BOEING
161A1118-16	OUTER CYLINDER	BOEING
161A1118-17	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-18	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-19	OUTER CYLINDER	BOEING
161A1118-2	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-20	OUTER CYLINDER	BOEING
161A1118-25	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-26	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-27	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-28	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-3	OUTER CYLINDER	BOEING
161A1118-4	OUTER CYLINDER	BOEING
161A1118-5	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-6	OUTER CYLINDER ASSEMBLY	BOEING
161A1118-7	OUTER CYLINDER	BOEING
161A1118-8	OUTER CYLINDER	BOEING
161A1118-9	OUTER CYLINDER ASSEMBLY	BOEING
161A1120	INNER CYLINDER ASSEMBLY	BOEING
161A1120-1	INNER CYLINDER ASSEMBLY	BOEING
161A1120-11	INNER CYLINDER ASSEMBLY	BOEING
161A1120-2	INNER CYLINDER ASSEMBLY	BOEING
161A1120-3	INNER CYLINDER ASSEMBLY	BOEING
161A1120-4	INNER CYLINDER ASSEMBLY	BOEING
161A1120-7	INNER CYLINDER ASSEMBLY	BOEING
161A1120-8	INNER CYLINDER ASSEMBLY	BOEING
161A1120-9	INNER CYLINDER ASSEMBLY	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A1121	INNER CYLINDER ASSEMBLY	BOEING
161A1121-1	INNER CYLINDER ASSEMBLY	BOEING
161A1121-2	INNER CYLINDER	BOEING
161A1123	BUSHING	BOEING
161A1123-1	BUSHING	BOEING
161A1126	INNER CYLINDER ASSEMBLY	BOEING
161A1126-1	INNER CYLINDER ASSEMBLY	BOEING
161A1126-2	INNER CYLINDER	BOEING
161A1126-3	INNER CYLINDER ASSEMBLY	BOEING
161A1126-4	INNER CYLINDER	BOEING
161A1127	BRAKE SLEEVE	BOEING
161A1127-1	BRAKE SLEEVE	BOEING
161A1128	PIN	BOEING
161A1128-1	PIN	BOEING
161A1128-2	PIN	BOEING
161A1128-3	PIN	BOEING
161A1129	INNER CYLINDER ASSEMBLY	BOEING
161A1129-1	INNER CYLINDER ASSEMBLY	BOEING
161A1129-2	INNER CYLINDER	BOEING
161A1130	AXLE ASSEMBLY	BOEING
161A1130-1	AXLE ASSEMBLY	BOEING
161A1130-11	AXLE ASSEMBLY	BOEING
161A1130-12	AXLE	BOEING
161A1130-13	AXLE ASSEMBLY	BOEING
161A1130-14	AXLE	BOEING
161A1130-15	AXLE ASSEMBLY	BOEING
161A1130-16	AXLE	BOEING
161A1130-19	AXLE ASSEMBLY	BOEING
161A1130-2	AXLE	BOEING
161A1130-21	AXLE ASSEMBLY	BOEING
161A1130-22	AXLE	BOEING
161A1130-3	AXLE ASSEMBLY	BOEING
161A1130-4	AXLE	BOEING
161A1130-5	AXLE ASSEMBLY	BOEING
161A1130-6	AXLE	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A1130-7	AXLE ASSEMBLY	BOEING
161A1130-8	AXLE	BOEING
161A1131	WHEEL SLEEVE	BOEING
161A1131-1	WHEEL SLEEVE	BOEING
161A1132	PIN	BOEING
161A1132-1	PIN	BOEING
161A1140	UPPER TORSION LINK ASSEMBLY	BOEING
161A1140-1	UPPER TORSION LINK ASSEMBLY	BOEING
161A1140-2	UPPER TORSION LINK	BOEING
161A1140-3	UPPER TORSION LINK ASSEMBLY	BOEING
161A1140-4	UPPER TORSION LINK	BOEING
161A1140-5	UPPER TORSION LINK ASSEMBLY	BOEING
161A1140-6	UPPER TORSION LINK	BOEING
161A1142	LOWER TORSION LINK ASSEMBLY	BOEING
161A1142-1	LOWER TORSION LINK ASSEMBLY	BOEING
161A1142-2	LOWER TORSION LINK	BOEING
161A1142-3	LOWER TORSION LINK ASSEMBLY	BOEING
161A1142-4	LOWER TORSION LINK	BOEING
161A1142-5	LOWER TORSION LINK ASSEMBLY	BOEING
161A1142-6	LOWER TORSION LINK	BOEING
161A1145	APEX PIN	BOEING
161A1145-1	APEX PIN	BOEING
161A1146	TORSION LINK PIN	BOEING
161A1146-1	TORSION LINK PIN	BOEING
161A1147	TORSION PIN LINK ASSEMBLY	BOEING
161A1147-1	TORSION PIN LINK ASSEMBLY	BOEING
161A1147-10	TORSION PIN	BOEING
161A1147-2	TORSION PIN	BOEING
161A1147-3	TORSION PIN LINK ASSEMBLY	BOEING
161A1147-4	TORSION PIN	BOEING
161A1147-5	TORSION PIN LINK ASSEMBLY	BOEING
161A1147-6	TORSION PIN	BOEING
161A1147-7	TORSION PIN LINK ASSEMBLY	BOEING
161A1147-8	TORSION PIN	BOEING
161A1147-9	TORSION PIN LINK ASSEMBLY	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A1150	METERING PIN	BOEING
161A1150-1	METERING PIN	BOEING
161A1152	ORIFICE SUPPORT TUBE	BOEING
161A1152-1	ORIFICE SUPPORT TUBE	BOEING
161A1152-2	ORIFICE SUPPORT TUBE	BOEING
161A1154	GLAND NUT	BOEING
161A1154-1	GLAND NUT	BOEING
161A1154-2	GLAND NUT	BOEING
161A1154-3	GLAND NUT	BOEING
161A1167	BEARING CARRIER	BOEING
161A1167-1	BEARING CARRIER ASSEMBLY	BOEING
161A1167-2	BEARING CARRIER	BOEING
161A1167-3	BEARING CARRIER	BOEING
161A1167-4	BEARING CARRIER ASSEMBLY	BOEING
161A1167-5	BEARING CARRIER	BOEING
161A1167-6	BEARING CARRIER	BOEING
161A1168	BEARING CARRIER	BOEING
161A1168-1	BEARING CARRIER	BOEING
161A1169	RETAINER NUT ASSEMBLY	BOEING
161A1169-1	RETAINER NUT ASSEMBLY	BOEING
161A1169-2	RETAINER NUT	BOEING
161A1170	RETAINER NUT ASSEMBLY	BOEING
161A1170-1	RETAINER NUT ASSEMBLY	BOEING
161A1170-2	RETAINER NUT	BOEING
161A1181	UPLOCK ROLLER ASSEMBLY	BOEING
161A1181-1	UPLOCK ROLLER ASSEMBLY	BOEING
161A1181-2	UPLOCK ROLLER	BOEING
161A1182	ROLLER PIN	BOEING
161A1182-1	ROLLER PIN	BOEING
161A1190	CROSSBOLT PIN	BOEING
161A1190-1	CROSSBOLT PIN	BOEING
161A1190-2	CROSSBOLT PIN	BOEING
161A1190-3	CROSSBOLT PIN	BOEING
161A1196	SPLINED WASHER ASSEMBLY	BOEING
161A1196-1	SPLINED WASHER ASSEMBLY	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A1196-2	SPLINED WASHER	BOEING
161A1200	BRACKET ASSEMBLY	BOEING
161A1200-10	BRACKET ASSEMBLY	BOEING
161A1200-11	BRACKET	BOEING
161A1200-12	BRACKET	BOEING
161A1200-13	BRACKET ASSEMBLY	BOEING
161A1200-14	BRACKET ASSEMBLY	BOEING
161A1200-15	BRACKET	BOEING
161A1200-16	BRACKET	BOEING
161A1200-5	BRACKET ASSEMBLY	BOEING
161A1200-6	BRACKET ASSEMBLY	BOEING
161A1200-7	BRACKET	BOEING
161A1200-8	BRACKET	BOEING
161A1200-9	BRACKET ASSEMBLY	BOEING
161A1212	SPACER ASSEMBLY	BOEING
161A1212-1	SPACER ASSEMBLY	BOEING
161A1212-2	SPACER	BOEING
161A1212-3	SPACER ASSEMBLY	BOEING
161A1212-4	SPACER	BOEING
161A1212-5	SPACER ASSEMBLY	BOEING
161A1212-6	SPACER	BOEING
161A1212-7	SPACER ASSEMBLY	BOEING
161A1212-8	SPACER	BOEING
161A1214	APEX PIN	BOEING
161A1214-1	APEX PIN	BOEING
161A1214-2	APEX PIN	BOEING
161A1214-3	APEX PIN	BOEING
161A1214-4	APEX PIN	BOEING
161A1217	SPLINED WASHER ASSEMBLY	BOEING
161A1217-1	SPLINED WASHER ASSEMBLY	BOEING
161A1217-2	SPLINED WASHER	BOEING
161A1217-3	SPLINED WASHER ASSEMBLY	BOEING
161A1217-4	SPLINED WASHER	BOEING
161A1219	SLEEVE	BOEING
161A1219-1	SLEEVE	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A1219-2	SLEEVE	BOEING
161A1220	SLEEVE	BOEING
161A1220-1	SLEEVE	BOEING
161A1220-2	SLEEVE	BOEING
161A1221	CROSSBOLT	BOEING
161A1221-1	CROSSBOLT	BOEING
161A1221-2	CROSSBOLT	BOEING
161A1315	TRAY ASSEMBLY	BOEING
161A1315-1	TRAY ASSEMBLY	BOEING
161A1315-2	TRAY ASSEMBLY	BOEING
161A1315-3	TRAY ASSEMBLY	BOEING
161A1315-4	TRAY ASSEMBLY	BOEING
161A1320	FITTING ASSEMBLY	BOEING
161A1320-1	FITTING ASSEMBLY	BOEING
161A1320-2	FITTING	BOEING
161A2000-10	DRAG BRACE, MLG	BOEING
161A2000-2	DRAG BRACE, MLG	BOEING
161A2000-2	DRAG BRACE, MLG	BOEING
161A2000-3	DRAG BRACE, MLG	BOEING
161A2000-4	DRAG BRACE, MLG	BOEING
161A2000-5	DRAG BRACE, MLG	BOEING
161A2000-6	DRAG BRACE, MLG	BOEING
161A2000-7	DRAG BRACE, MLG	BOEING
161A2000-8	DRAG BRACE, MLG	BOEING
161A2100-10	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-11	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-12	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-13	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-14	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-15	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-16	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-17	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-18	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-19	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-20	SIDE STRUT ASSEMBLY, MLG	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
161A2100-21	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-22	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-23	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-24	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-25	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-26	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-27	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-28	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-5	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-6	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-7	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-8	SIDE STRUT ASSEMBLY, MLG	BOEING
161A2100-9	SIDE STRUT ASSEMBLY, MLG	BOEING
161A6100-3	MLG UPLOCK ASSEMBLY	BOEING
161A7000-3	WALKING BEAM, MLG	BOEING
161A7000-4	WALKING BEAM, MLG	BOEING
161A7100-1	WALKING BEAM, MLG	BOEING
161A7100-2	WALKING BEAM, MLG	BOEING
161A7119-1	WALKING BEAM, MLG	BOEING
161A7301-1	WALKING BEAM, MLG	BOEING
161A7303-1	WALKING BEAM, MLG	BOEING
161A7304-1	WALKING BEAM, MLG	BOEING
161A7304-2	WALKING BEAM, MLG	BOEING
161A7304-3	WALKING BEAM, MLG	BOEING
162A1100-10	NOSE LANDING GEAR	BOEING
162A1100-11	NOSE LANDING GEAR	BOEING
162A1100-12	NOSE LANDING GEAR	BOEING
162A1100-13	NOSE LANDING GEAR	BOEING
162A1100-14	NOSE LANDING GEAR	BOEING
162A1100-15	NOSE LANDING GEAR	BOEING
162A1100-4	NOSE LANDING GEAR	BOEING
162A1100-5	NOSE LANDING GEAR	BOEING
162A1100-6	NOSE LANDING GEAR	BOEING
162A1100-7	NOSE LANDING GEAR	BOEING
162A1100-8	NOSE LANDING GEAR	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
162A1100-9	NOSE LANDING GEAR	BOEING
162A1110	OUTER CYLINDER ASSEMBLY	BOEING
162A1110-1	OUTER CYLINDER ASSEMBLY	BOEING
162A1110-2	OUTER CYLINDER	BOEING
162A1110-3	OUTER CYLINDER ASSEMBLY	BOEING
162A1110-4	OUTER CYLINDER	BOEING
162A1110-5	OUTER CYLINDER ASSEMBLY	BOEING
162A1110-6	OUTER CYLINDER	BOEING
162A1110-7	OUTER CYLINDER ASSEMBLY	BOEING
162A1110-8	OUTER CYLINDER	BOEING
162A1120	INNER CYLINDER ASSEMBLY	BOEING
162A1120-1	INNER CYLINDER ASSEMBLY	BOEING
162A1120-2	INNER CYLINDER	BOEING
162A1120-3	INNER CYLINDER ASSEMBLY	BOEING
162A1120-4	INNER CYLINDER	BOEING
162A1120-5	INNER CYLINDER ASSEMBLY	BOEING
162A1120-6	INNER CYLINDER	BOEING
162A1120-7	INNER CYLINDER ASSEMBLY	BOEING
162A1120-8	INNER CYLINDER	BOEING
162A1160	TOW FITTING ASSEMBLY	BOEING
162A1160-1	TOW FITTING ASSEMBLY	BOEING
162A1160-2	TOW FITTING	BOEING
162A1160-5	TOW FITTING ASSEMBLY	BOEING
162A1160-6	TOW FITTING	BOEING
162A1306	PIN	BOEING
162A1306-1	PIN	BOEING
162A1306-2	PIN	BOEING
162A1310	PIN	BOEING
162A1310-1	PIN	BOEING
162A1310-2	PIN	BOEING
162A1311	UPPER TORSION LINK ASSEMBLY	BOEING
162A1311-1	UPPER TORSION LINK ASSEMBLY	BOEING
162A1311-2	UPPER TORSION LINK	BOEING
162A1311-3	UPPER TORSION LINK ASSEMBLY	BOEING
162A1311-4	UPPER TORSION LINK	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
162A1312	LOWER TORSION LINK ASSEMBLY	BOEING
162A1312-1	LOWER TORSION LINK ASSEMBLY	BOEING
162A1312-2	LOWER TORSION LINK	BOEING
162A1312-3	LOWER TORSION LINK ASSEMBLY	BOEING
162A1312-4	LOWER TORSION LINK	BOEING
162A1313	LOWER TORSION LINK ASSEMBLY	BOEING
162A1313-1	LOWER TORSION LINK ASSEMBLY	BOEING
162A1313-2	LOWER TORSION LINK	BOEING
162A1313-3	LOWER TORSION LINK ASSEMBLY	BOEING
162A1313-4	LOWER TORSION LINK	BOEING
162A1315	UPPER TORSION LINK ASSEMBLY	BOEING
162A1315-1	UPPER TORSION LINK ASSEMBLY	BOEING
162A1315-2	UPPER TORSION LINK	BOEING
162A1315-3	UPPER TORSION LINK ASSEMBLY	BOEING
162A1315-4	UPPER TORSION LINK	BOEING
162A1404	STEERING COLLAR ASSEMBLY	BOEING
162A1404-3	STEERING COLLAR ASSEMBLY	BOEING
162A1404-4	STEERING COLLAR	BOEING
162A1404-5	STEERING COLLAR ASSEMBLY	BOEING
162A1404-6	STEERING COLLAR	BOEING
162A1404-7	STEERING COLLAR ASSEMBLY	BOEING
162A1404-9	STEERING COLLAR ASSEMBLY	BOEING
162A1405	SLEEVE ASSEMBLY	BOEING
162A1405-10	SLEEVE	BOEING
162A1405-11	SLEEVE ASSEMBLY	BOEING
162A1405-12	SLEEVE	BOEING
162A1405-13	SLEEVE ASSEMBLY	BOEING
162A1405-14	SLEEVE	BOEING
162A1405-15	SLEEVE ASSEMBLY	BOEING
162A1405-16	SLEEVE	BOEING
162A1405-17	SLEEVE ASSEMBLY	BOEING
162A1405-18	SLEEVE	BOEING
162A1405-3	SLEEVE ASSEMBLY	BOEING
162A1405-4	SLEEVE	BOEING
162A1405-5	SLEEVE ASSEMBLY	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
--------------------	--------------------	---------------------

162A1405-6	SLEEVE	BOEING
162A1405-7	SLEEVE ASSEMBLY	BOEING
162A1405-8	SLEEVE	BOEING
162A1405-9	SLEEVE ASSEMBLY	BOEING
162A1417	STEERING PLATE ASSEMBLY	BOEING
162A1417-10	STEERING PLATE	BOEING
162A1417-11	STEERING PLATE ASSEMBLY	BOEING
162A1417-12	STEERING PLATE	BOEING
162A1417-13	STEERING PLATE ASSEMBLY	BOEING
162A1417-14	STEERING PLATE	BOEING
162A1417-15	STEERING PLATE ASSEMBLY	BOEING
162A1417-16	STEERING PLATE	BOEING
162A1417-17	STEERING PLATE ASSEMBLY	BOEING
162A1417-18	STEERING PLATE	BOEING
162A1417-3	STEERING PLATE ASSEMBLY	BOEING
162A1417-4	STEERING PLATE	BOEING
162A1417-5	STEERING PLATE ASSEMBLY	BOEING
162A1417-6	STEERING PLATE	BOEING
162A1417-7	STEERING PLATE ASSEMBLY	BOEING
162A1417-8	STEERING PLATE	BOEING
162A1417-9	STEERING PLATE ASSEMBLY	BOEING
162A1420	STEERING COLLAR ASSEMBLY	BOEING
162A1420-1	STEERING COLLAR ASSEMBLY	BOEING
162A1420-2	STEERING COLLAR ASSEMBLY	BOEING
162A1421	SLEEVE ASSEMBLY	BOEING
162A1421-1	SLEEVE ASSEMBLY	BOEING
162A1421-2	SLEEVE	BOEING
162A1421-3	SLEEVE ASSEMBLY	BOEING
162A1421-4	SLEEVE	BOEING
162A1501	CENTERING CAM ASSEMBLY	BOEING
162A1501-1	CENTERING CAM ASSEMBLY	BOEING
162A1501-2	CENTERING CAM	BOEING
162A1503	METERING PIN	BOEING
162A1503-2	METERING PIN	BOEING
162A1505	NUT ASSEMBLY	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
162A1505-1	NUT ASSEMBLY	BOEING
162A1505-2	NUT	BOEING
162A1507	ORIFICE SUPPORT TUBE	BOEING
162A1507-1	ORIFICE SUPPORT TUBE	BOEING
162A1510	LOWER BEARING CARRIER	BOEING
162A1510-1	LOWER BEARING CARRIER	BOEING
162A1511	UPPER BEARING CARRIER ASSEMBLY	BOEING
162A1511-4	UPPER BEARING CARRIER ASSEMBLY	BOEING
162A1511-5	UPPER BEARING CARRIER	BOEING
162A1511-6	UPPER BEARING CARRIER	BOEING
162A1513	GLAND NUT	BOEING
162A1513-1	GLAND NUT	BOEING
162A1513-2	GLAND NUT	BOEING
162A1513-3	GLAND NUT	BOEING
1651	VALVE, PRESSURE RELIEF	PNEUDRAULICS
1697EA	VALVE, HYDRAULIC CONTROL	SARGENT CONTROLS
1697EA-1	VALVE, HYDRAULIC CONTROL	SARGENT CONTROLS
183010-1-1	WATER SEPARATOR	HONEYWELL
183010-2	WATER SEPARATOR	HONEYWELL
183010-3	WATER SEPARATOR	HONEYWELL
183010-4	WATER SEPARATOR	HONEYWELL
215A1510-3	ACTUATOR, GROUND SPOILER	BOEING
2206400-1	AIR CYCLE MACHINE	HONEYWELL
2206400-2	AIR CYCLE MACHINE	HONEYWELL
2341178-1	BLEED AIR PRECOOLER	HONEYWELL
2341178-2	BLEED AIR PRECOOLER	HONEYWELL
251A1240-2	ACTUATOR, GROUND SPOILER	BOEING
251A2160-2	ACTUATOR	BOEING
251A4510-3	ACTUATOR	BOEING
251A4510-4	ACTUATOR	BOEING
251A4510-5	ACTUATOR	BOEING
251A4510-6	ACTUATOR	BOEING
251A4510-7	ACTUATOR	BOEING
251A4510-8	ACTUATOR	BOEING
251A4510-9	ACTUATOR	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
--------------------	--------------------	---------------------

256A3110-3	TRANSMISSION, FLAP	BOEING
256A3110-4	TRANSMISSION, FLAP	BOEING
256A3110-5	TRANSMISSION, FLAP	BOEING
256A3110-6	TRANSMISSION, FLAP	BOEING
256A3110-7	TRANSMISSION, FLAP	BOEING
256A3110-8	TRANSMISSION, FLAP	BOEING
256A3210-3	TRANSMISSION, FLAP	BOEING
256A3210-4	TRANSMISSION, FLAP	BOEING
256A3210-5	TRANSMISSION, FLAP	BOEING
256A3210-6	TRANSMISSION, FLAP	BOEING
256A3210-7	TRANSMISSION, FLAP	BOEING
256A3210-8	TRANSMISSION, FLAP	BOEING
256A3310-3	TRANSMISSION, FLAP	BOEING
256A3310-4	TRANSMISSION, FLAP	BOEING
256A3310-5	TRANSMISSION, FLAP	BOEING
256A3310-6	TRANSMISSION, FLAP	BOEING
256A3310-7	TRANSMISSION, FLAP	BOEING
256A3310-8	TRANSMISSION, FLAP	BOEING
256A3410-3	TRANSMISSION, FLAP	BOEING
256A3410-4	TRANSMISSION, FLAP	BOEING
256A3410-5	TRANSMISSION, FLAP	BOEING
256A3410-6	TRANSMISSION, FLAP	BOEING
256A3410-7	TRANSMISSION, FLAP	BOEING
256A3410-8	TRANSMISSION, FLAP	BOEING
256A3515-2	GEARBOX	BOEING
256A3580-1	VALVE, FLAP CONTROL	BOEING
273A1101-1	NOSE LANDING GEAR RETRACT ACTUATOR ASS	BOEING
273A1101-1	RETRACT ACTUATOR ASSEMBLY, NLG	BOEING
273A1201-1	ACTUATOR, LOCK	BOEING
273A1201-1	LOCK ACTUATOR ASSEMBLY, NLG	BOEING
273A1201-2	LOCK ACTUATOR ASSEMBLY, NLG	BOEING
273A2101-10	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-101	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-2	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-2	ACTUATOR, RETRACT	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
--------------------	--------------------	---------------------

273A2101-3	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-4	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-5	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-6	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-7	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-8	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2101-9	RETRACT ACTUATOR ASSEMBLY, MLG	BOEING
273A2201-1	MLG DOWNLOCK ACTUATOR ASSEMBLY	BOEING
273A2501-1	MLG UPLOCK ACTUATOR ASSEMBLY	BOEING
273A3610-1	SHIMMY DAMPER ASSEMBLY, MLG	BOEING
273A3610-1	SHIMMY DAMPER	BOEING
273A3610-2	SHIMMY DAMPER	BOEING
273A3610-2	SHIMMY DAMPER ASSEMBLY, MLG	BOEING
273A3610-3	SHIMMY DAMPER	BOEING
273A3610-3	SHIMMY DAMPER ASSEMBLY, MLG	BOEING
273A3610-4	SHIMMY DAMPER ASSEMBLY, MLG	BOEING
273A3610-5	SHIMMY DAMPER ASSEMBLY, MLG	BOEING
274N1003-10	VALVE, BRAKE SELECTOR	BOEING
274N1003-13	VALVE, BRAKE SELECTOR	BOEING
274N1003-15	VALVE, BRAKE SELECTOR	BOEING
274N1003-4	VALVE, BRAKE SELECTOR	BOEING
274N1003-5	VALVE, BRAKE SELECTOR	BOEING
274N1003-6	VALVE, BRAKE SELECTOR	BOEING
274N1003-7	VALVE, BRAKE SELECTOR	BOEING
274N1003-8	VALVE, BRAKE SELECTOR	BOEING
274N1028-4	VALVE, BRAKE SELECTOR	BOEING
274N1028-5	VALVE, BRAKE SELECTOR	BOEING
274N1028-6	VALVE, BRAKE SELECTOR	BOEING
274N1051	VALVE, BRAKE SELECTOR	BOEING
274N1051-1	VALVE, BRAKE SELECTOR	BOEING
274N1051-2	VALVE, BRAKE SELECTOR	BOEING
274N1051-3	VALVE, BRAKE SELECTOR	BOEING
274U0003-4	VALVE, BRAKE SELECTOR	BOEING
275A1101-3	ACTUATOR, STEERING	BOEING
275A1101-3	STEERING ACTUATOR ASSEMBLY, NLG	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
275A1101-4	STEERING ACTUATOR ASSEMBLY, NLG	BOEING
275A1101-4	ACTUATOR, STEERING	BOEING
275A1101-5	STEERING ACTUATOR ASSEMBLY, NLG	BOEING
275A1101-5	ACTUATOR, STEERING	BOEING
275A1101-6	STEERING ACTUATOR ASSEMBLY, NLG	BOEING
275A1101-6	ACTUATOR, STEERING	BOEING
275A1101-7	ACTUATOR, STEERING	BOEING
275A1101-7	STEERING ACTUATOR ASSEMBLY, NLG	BOEING
275A1101-8	STEERING ACTUATOR ASSEMBLY, NLG	BOEING
275A1101-8	ACTUATOR, STEERING	BOEING
2760000-101	VALVE, SHUT-OFF	PARKER
2790475-103	VALVE, PRESSURE RELIEF	PARKER
315A2800-1	THRUST REVERSER NON-LOCKING ACTUATOR A	BOEING
315A2800-2	THRUST REVERSER NON-LOCKING ACTUATOR A	BOEING
315A2801-1	THRUST REVERSER LOCKING ACTUATOR ASSE	BOEING
315A2801-4	THRUST REVERSER LOCKING ACTUATOR ASSE	BOEING
315A-2801-5	THRUST REVERSER LOCKING ACTUATOR ASSE	BOEING
319625-1	VALVE, SOLENOID	HONEYWELL
319625-5	VALVE, SOLENOID	HONEYWELL
319625-8	VALVE, SOLENOID	HONEYWELL
3202222-1	BLEED AIR CHECK VALVE	HONEYWELL
3202442-1	VALVE	HONEYWELL
3202442-2	VALVE	HONEYWELL
3202444-1	VALVE	HONEYWELL
3202446-1	VALVE	HONEYWELL
320548-1	VALVE, SOLENOID	HONEYWELL
320548-2	VALVE, SOLENOID	HONEYWELL
3214230-2	VALVE	HONEYWELL
3214230-3	VALVE	HONEYWELL
3214446-1	HIGH STAGE VALVE	HONEYWELL
3214446-2	HIGH STAGE VALVE	HONEYWELL
3214446-3	HIGH STAGE VALVE	HONEYWELL
3214446-4	HIGH STAGE VALVE	HONEYWELL
3214552-1	SHUTOFF AIRFLOW REGULATOR	HONEYWELL
3214552-2	SHUTOFF AIRFLOW REGULATOR	HONEYWELL

PART NUMBER	DESCRIPTION	MANUFACTURER
3214552-3	SHUTOFF AIRFLOW REGULATOR	HONEYWELL
3214552-4	SHUTOFF AIRFLOW REGULATOR	HONEYWELL
3214552-5	SHUTOFF AIRFLOW REGULATOR	HONEYWELL
3214862-1	VALVE	HONEYWELL
3214962-1	VALVE	HONEYWELL
3214972-1	VALVE	HONEYWELL
3215618-3	ANTI-ICE VALVE	HONEYWELL
321942-1-1	VALVE, AIRFLOW	HONEYWELL
3225006-1	PRECOOLER CONTROL VALVE	HONEYWELL
3289562-1	FOUR INCH DIAMETER PRECOOLER CONTROL V	HONEYWELL
3289562-2	FOUR INCH DIAMETER PRECOOLER CONTROL V	HONEYWELL
3289562-3	FOUR INCH DIAMETER PRECOOLER CONTROL V	HONEYWELL
3289562-4	FOUR INCH DIAMETER PRECOOLER CONTROL V	HONEYWELL
3289562-5	FOUR INCH DIAMETER PRECOOLER CONTROL V	HONEYWELL
3289630-1	VALVE, APU STARTER	HONEYWELL
3289630-2	VALVE, APU STARTER	HONEYWELL
3289630-3	VALVE, APU STARTER	HONEYWELL
3290206-1	VALVE	HONEYWELL
3290206-2	VALVE	HONEYWELL
3291186-6	TURBINE TIP CLEARANCE VALVE	HONEYWELL
3291214-2	THREE AND ONE-INCH DIAMETER APU BLEED AI	HONEYWELL
3291238-1	SURGE CONTROL VALVE	HONEYWELL
3291238-2	SURGE CONTROL VALVE	HONEYWELL
3291390-3	TRANSIENT BLEED VALVE	HONEYWELL
3505945-2	AIR TURBINE STARTER	HONEYWELL
3505945-3	AIR TURBINE STARTER	HONEYWELL
3505945-4	AIR TURBINE STARTER	HONEYWELL
3505945-5	AIR TURBINE STARTER	HONEYWELL
3505945-6	AIR TURBINE STARTER	HONEYWELL
3505945-7	AIR TURBINE STARTER	HONEYWELL
3505945-8	AIR TURBINE STARTER	HONEYWELL
3505945-9	AIR TURBINE STARTER	HONEYWELL
3810056-106	VALVE MODULE	PARKER HANNIFIN
381800-1003	ACTUATOR, SLAT	PARKER
3820000-1001	ACTUATOR, FLAP	PARKER

PART NUMBER	DESCRIPTION	MANUFACTURER
383900-1007	VALVE ASSY	PARKER
38-805	GROUND SPOILER INTERLOCK VALVE	CRANE
394100-1003	VALVE	PARKER
396442-1	VALVE, FLOW CONTROL	HONEYWELL
396498-1	VALVE, FLOW CONTROL	HONEYWELL
396498-2	VALVE, FLOW CONTROL	HONEYWELL
396608-1	VALVE, FLOW CONTROL	HONEYWELL
396632-2	FLOW CONTROL VALVE	HONEYWELL
398116-1-1	VALVE, SHUT-OFF	HONEYWELL
398908-2	VALVE	HONEYWELL
398908-3	VALVE	HONEYWELL
541674-1-1	LINEAR ACTUATOR	HONEYWELL
541674-3	LINEAR ACTUATOR	HONEYWELL
541674-4	LINEAR ACTUATOR	HONEYWELL
541674-5	LINEAR ACTUATOR	HONEYWELL
541674-6	LINEAR ACTUATOR	HONEYWELL
57186-01	HYDRAULIC PUMP	PARKER
57186-03	HYDRAULIC PUMP	PARKER
57186-04	HYDRAULIC PUMP	PARKER
57186-05	HYDRAULIC PUMP	PARKER
57186-06	HYDRAULIC PUMP	PARKER
57186-07	HYDRAULIC PUMP	PARKER
57186-10	HYDRAULIC PUMP	PARKER
606515-1	BYPASS VALVE	HONEYWELL
65-17821-21	MODULAR ASSY	BOEING
65-44681-18	MODULAR STANDBY	BOEING
65-44690-23	ACTUATOR, GROUND SPOILER	BOEING
65-44690-24	ACTUATOR, GROUND SPOILER	BOEING
65-44690-25	ACTUATOR, GROUND SPOILER	BOEING
65-44690-27	ACTUATOR, GROUND SPOILER	BOEING
65-44690-28	ACTUATOR, GROUND SPOILER	BOEING
65-44891-7	MODULAR FLIGHT CONTROL	BOEING
654A0012-37	NOSE LANDING GEAR	BOEING
65C26816-2	VALVE, BRAKE SELECTOR	BOEING
65C26816-3	VALVE, BRAKE SELECTOR	BOEING

PART NUMBER	DESCRIPTION	MANUFACTURER
65C26816-4	VALVE, BRAKE SELECTOR	BOEING
65C26816-5	VALVE, BRAKE SELECTOR	BOEING
65C26816-6	VALVE, BRAKE SELECTOR	BOEING
65C26816-7	VALVE, BRAKE SELECTOR	BOEING
65C26816-8	VALVE, BRAKE SELECTOR	BOEING
65C26816-9	VALVE, BRAKE SELECTOR	BOEING
65C26864-1	ACTUATOR, GROUND SPOILER	BOEING
65C26864-2	ACTUATOR, GROUND SPOILER	BOEING
65C26864-3	ACTUATOR, GROUND SPOILER	BOEING
65C26869-2	VALVE, AUTO SLAT	BOEING
66087	HYDRAULIC PUMP	PARKER
67940-2	VALVE	VICKERS
71404-1	VALVE, BRAKE	VICKERS
71784	VALVE, TRANSFER	VICKERS
720737-1	VALVE, SAFETY	HAMILTON SUNDSTR
720737-2	VALVE, SAFETY	HAMILTON SUNDSTR
720737-3	VALVE, SAFETY	HAMILTON SUNDSTR
720737-4	VALVE, SAFETY	HAMILTON SUNDSTR
720737-5	VALVE, SAFETY	HAMILTON SUNDSTR
720737-6	VALVE, SAFETY	HAMILTON SUNDSTR
720737-7	VALVE, SAFETY	HAMILTON SUNDSTR
734-18520-01	VALVE ASSEMBLY, SEQUENCE, UPLOCK	SHIMADZU
940732	HYDRAULIC PUMP	VICKERS
973600	HYDRAULIC PUMP	VICKERS
MF1-152-13	HYDRAULIC PUMP	VICKERS
R15048	ACTUATOR, AILERON	SMITHS INDUSTRIES
R5303M1	ACTUATOR, SPEED BRAKE	GE AVIATION
R6200M3-13	ACTUATOR, APU DOOR	SMITHS INDUSTRIES
S210A001-1	AIR CYCLE MACHINE	HONEYWELL
S210A001-4	AIR CYCLE MACHINE	HONEYWELL