

PART NUMBER	DESCRIPTION	MANUFACTURER
104467009	MLG RETRACTION ACTUATOR ASSEMBLY, L/H	MESSIER-DOWTY
104467010	MLG RETRACTION ACTUATOR ASSEMBLY, R/H	MESSIER-DOWTY
104470002	NLG UPLOCK ACTUATOR	MESSIER-DOWTY
104471003	NLG RETRACTION ACTUATOR ASSEMBLY	MESSIER-DOWTY
104479001	ONE-WAY RESTRICTOR VALVE	MESSIER-DOWTY
104642001	DOWNLOCK AUXILIARY ACTUATOR ASSEMBLY	MESSIER-DOWTY
126758-3	PNEUMATIC DRIVE ACTUATOR	HONEYWELL
126758-5	PNEUMATIC DRIVE ACTUATOR	HONEYWELL
126758-5-2	PNEUMATIC DRIVE ACTUATOR	HONEYWELL
126758-6	PNEUMATIC DRIVE ACTUATOR	HONEYWELL
126758-6-2	PNEUMATIC DRIVE ACTUATOR	HONEYWELL
126758-7	PNEUMATIC DRIVE ACTUATOR	HONEYWELL
126758-8	PNEUMATIC DRIVE ACTUATOR	HONEYWELL
1285A0100-01	SWIVEL VALVE ASSEMBLY, L/H	MESSIER-DOWTY
1285A0300-01	SWIVEL VALVE ASSEMBLY, R/H	MESSIER-DOWTY
1287A0000-02	STEERING MANIFOLD ASSEMBLY, L/H	MESSIER-DOWTY
1288A0000-02	STEERING MANIFOLD ASSEMBLY, R/H	MESSIER-DOWTY
1289A0000-01	STEERING MANIFOLD ASSEMBLY	MESSIER-DOWTY
16600-101	NLG UPLOCK ASSEMBLY	MESSIER-DOWTY
16600-103	NLG UPLOCK ASSEMBLY	MESSIER-DOWTY
17051-101	UPLOCK ASSY, MLG	MESSIER-DOWTY
19010-101-1	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19010-101-2	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19010-103	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19010-105	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19011-101-1	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19011-101-2	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19011-103	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19011-105	MLG SIDE STAY ACTUATOR ASSEMBLY	GE AVIATION
19090-104	MAIN LANDING GEAR	MESSIER-DOWTY
19090-105	MAIN LANDING GEAR	MESSIER-DOWTY
19090-106	MAIN LANDING GEAR	MESSIER-DOWTY

PART NUMBER	DESCRIPTION	MANUFACTURER
19090-107	MAIN LANDING GEAR	MESSIER-DOWTY
19090-108	MAIN LANDING GEAR	MESSIER-DOWTY
19300-103	WOW SENSOR # 1 AND ANTI-SKID LHS INBD HAR	MESSIER-DOWTY
19300-104	WOW SENSOR # 1 AND ANTI-SKID RHS INBD HAR	MESSIER-DOWTY
19300-123	WOW SENSOR # 2 AND ANTI-SKID LHS OUTBD HA	MESSIER-DOWTY
19300-124	WOW SENSOR # 2 AND ANTI-SKID RHS OUTBD H	MESSIER-DOWTY
19300-141	DOWNLOCK SENSOR # 1 HARNESS, MLG	MESSIER-DOWTY
19300-151	DOWNLOCK SENSOR # 2 HARNESS, MLG	MESSIER-DOWTY
19300-201	WOW SENSOR # 2 AND GEAR CENTRE SENSOR	MESSIER-DOWTY
19300-221	WOW SENSOR # 1 HARNESS, NLG	MESSIER-DOWTY
19300-231	DOWNLOCK SENSOR # 2 HARNESS, MLG	MESSIER-DOWTY
19300-251	DOWNLOCK SENSOR # 1 HARNESS, NLG	MESSIER-DOWTY
19300-261	DOWNLOCK SENSOR # 2 HARNESS, NLG	MESSIER-DOWTY
20020-101	NOSE LANDING GEAR	MESSIER-DOWTY
20020-103	NOSE LANDING GEAR	MESSIER-DOWTY
20020-105	NOSE LANDING GEAR	MESSIER-DOWTY
20045-101	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY
20045-103	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY
200812001	STEERING ACTUATOR	MESSIER-DOWTY
200814001	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY
200815001	MLG URLOCK ASSEMBLY	MESSIER-DOWTY
200816001	NLG UPLOCK ASSEMBLY	MESSIER-DOWTY
200823001	MLG UPLOCK ACTUATOR	MESSIER-DOWTY
200922001	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
200922002	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
200924004	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
21100-111	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
21100-112	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
21100-113	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
21100-114	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
21500-101	MLG SIDE BRACE ACTUATOR ASSEMBLY	MESSIER-DOWTY
21500-103	MLG SIDE BRACE ACTUATOR ASSEMBLY	MESSIER-DOWTY
21500-105	MLG SIDE BRACE ACTUATOR ASSEMBLY	MESSIER-DOWTY
21500-107	MLG SIDE BRACE ACTUATOR ASSEMBLY	MESSIER-DOWTY
21600-101	MLG RETRACTION ACTUATOR ASSEMBLY, L/H	MESSIER-DOWTY

PART NUMBER	DESCRIPTION	MANUFACTURER
21600-102	MLG RETRACTION ACTUATOR ASSEMBLY, R/H	MESSIER-DOWTY
21900-101	MLG UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
21900-102	MLG UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
21900-103	MLG UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
21900-104	MLG UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
22175-105	NLG STRUT ASSEMBLY	MESSIER-DOWTY
22175-107	NLG STRUT ASSEMBLY	MESSIER-DOWTY
22175-109	NLG STRUT ASSEMBLY	MESSIER-DOWTY
22400-101	NLG RETRACTION ACTUATOR ASSEMBLY	MESSIER-DOWTY
22400-103	NLG RETRACTION ACTUATOR ASSEMBLY	MESSIER-DOWTY
22500-101	DRAG BRACE ASSEMBLY, NLG	MESSIER-DOWTY
22500-103	DRAG BRACE ASSEMBLY, NLG	MESSIER-DOWTY
22500-105	DRAG BRACE ASSEMBLY, NLG	MESSIER-DOWTY
22600-101	UPLOCK ASSEMBLY, NLG	MESSIER-DOWTY
22600-103	UPLOCK ASSEMBLY, NLG	MESSIER-DOWTY
2400248	STEERING MANIFOLD ASSEMBLY	MESSIER-DOWTY
25100-101	MLG DOOR UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
25100-102	MLG DOOR UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
25100-103	MLG DOOR UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
25100-104	MLG DOOR UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
25100-105	MLG DOOR UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
25100-106	MLG DOOR UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
25100-107	MLG DOOR UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
25100-108	MLG DOOR UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
25100-109	MLG DOOR UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
25100-110	MLG DOOR UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
25200-101	INBD DOOR ACTUATOR ASSEMBLY, MLG	MESSIER-DOWTY
25200-101	MLG INBD DOOR ACTUATOR ASSEMBLY	MESSIER-DOWTY
26100-101	NLG FWD DOOR UPLOCK ASSEMBLY	MESSIER-DOWTY
26100-103	NLG FWD DOOR UPLOCK ASSEMBLY	MESSIER-DOWTY
26200-101	NLG TORQUE TUBE ASSEMBLY	MESSIER-DOWTY
26200-103	NLG TORQUE TUBE ASSEMBLY	MESSIER-DOWTY
26500-101	FWD DOOR ACTUATOR ASSEMBLY, NLG	MESSIER-DOWTY
3289590-2	VALVE, BUTTERFLY	HONEYWELL
3289590-3	VALVE, BUTTERFLY	HONEYWELL

PART NUMBER	DESCRIPTION	MANUFACTURER
--------------------	--------------------	---------------------

35170-16	ELECTROMECHANICAL ROTARY ACTUATOR	HONEYWELL
35170-3	ELECTROMECHANICAL ROTARY ACTUATOR	HONEYWELL
398724-1-1	VALVE, SHUT-OFF	HONEYWELL
398724-1-2	VALVE, SHUT-OFF	HONEYWELL
40110-101	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
40110-102	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
40110-103	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
40110-104	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
40110-105	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
40110-106	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
40110-107	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
40110-108	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
40110-109	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
40110-110	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
40110-111	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
40110-112	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
40110-113	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
40110-114	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
40250-101	AUXILIARY EXTEND ACTUATOR ASSEMBLY, MLG	MESSIER-DOWTY
40300-103	MLG SIDE BRACE ACTUATOR ASSEMBLY	MESSIER-DOWTY
40310-101	SIDE BRACE ACTUATOR ASSEMBLY, MLG	MESSIER-DOWTY
40310-101A	SIDE BRACE ACTUATOR ASSEMBLY, MLG	MESSIER-DOWTY
40310-103	SIDE BRACE ACTUATOR ASSEMBLY, MLG	MESSIER-DOWTY
40500-101	MLG UPLOCK ASSEMBLY, L/H	MESSIER-DOWTY
40500-102	MLG UPLOCK ASSEMBLY, R/H	MESSIER-DOWTY
40610-107	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
40610-109	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
40610-111	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
40610-113	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
40700-101	NLG RETRACTION ACTUATOR ASSEMBLY	MESSIER-DOWTY
40700-103	NLG RETRACTION ACTUATOR ASSEMBLY	MESSIER-DOWTY
40750-101	STEERING MANIFOLD ASSEMBLY	MESSIER-DOWTY
40800-101	NLG UPLOCK ASSEMBLY	MESSIER-DOWTY
40900-101	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY
40900-103	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY

PART NUMBER	DESCRIPTION	MANUFACTURER
--------------------	--------------------	---------------------

6100-1	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-10	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-11	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-12	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-13	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-14	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-15	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-16	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-17	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-18	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-19	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-2	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-20	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-207	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-208	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-209	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-21	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-210	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-217	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-218	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-219	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-22	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-220	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-23	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-24	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-4	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-5	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-6	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-7	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6100-8	MAIN LANDING GEAR ASSEMBLY, R/H	MESSIER-DOWTY
6100-9	MAIN LANDING GEAR ASSEMBLY, L/H	MESSIER-DOWTY
6500-1	MLG RETRACTION ACTUATOR ASSEMBLY	MESSIER-DOWTY
6500-3	MLG RETRACTION ACTUATOR ASSEMBLY	MESSIER-DOWTY
7102-3	STEERING CONTROL AND POSITION FEEDBACK	MESSIER-DOWTY
7102-5	STEERING CONTROL AND POSITION FEEDBACK	MESSIER-DOWTY

PART NUMBER	DESCRIPTION	MANUFACTURER
--------------------	--------------------	---------------------

7102-7	STEERING CONTROL AND POSITION FEEDBACK	MESSIER-DOWTY
7200-1	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY
7200-3	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY
7200-5	NLG DRAG BRACE ASSEMBLY	MESSIER-DOWTY
7300-11	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7300-13	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7300-15	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7300-17	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7300-3	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7300-5	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7300-7	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7300-9	NOSE LANDING GEAR ASSEMBLY	MESSIER-DOWTY
7302-1	STEERING ACTUATOR	MESSIER-DOWTY
9014-1	DOWNLOCK AUXILIARY ACTUATOR ASSEMBLY	MESSIER-DOWTY
9014-3	DOWNLOCK AUXILIARY ACTUATOR ASSEMBLY	MESSIER-DOWTY
979142-1-1	SHUTOFF VALVE	HONEYWELL
979142-3-1	SHUTOFF VALVE	HONEYWELL
979142-6-1	SHUTOFF VALVE	HONEYWELL
979626-2-1	VALVE, SHUT-OFF	HONEYWELL
979626-3-1	VALVE, SHUT-OFF	HONEYWELL
979626-4-1	VALVE, SHUT-OFF	HONEYWELL
979626-5-1	AIR SHUT-OFF VALVE	HONEYWELL
979626-6	VALVE, SHUT-OFF	HONEYWELL
979998-1	VALVE, SHUT-OFF	HONEYWELL
979998-2	VALVE, SHUT-OFF	HONEYWELL
979998-3	VALVE, SHUT-OFF	HONEYWELL